

Clax Sonril

Laundry Oxygen Destainer

4EL1

Description

Clax Sonril 4EL1 is a peroxide based liquid bleach suitable for use in all types of industrial laundry machines. *Clax Sonril 4EL1* effectively removes staining in coloured garments and is suitable for the removal of chlorhexadine stains.

Features

- ♦Oxygen destainer
- ♦Stabilised formulation
- ♦Hydrogen peroxide formulation
- ♦Compatible with all detergent products
- ♦Concentrated formulation
- ♦Colour coded alpha numeric label

Benefits

- ♦Safe on coloured linen.
- ♦Extended shelf life and stability.
- ♦Will not set chlorhexadine stains.
- ♦Can be used simultaneously in the main wash with detergent and booster.
- ♦Economical dosage control, long drum life.
- ♦Easy identification - assists staff training.


Instructions for use

Clax Sonril 4EL1 is designed for use through the JohnsonDiversey automatic dispensing equipment and should never be manually dosed. For best results maintain alkalinity at pH 11-12 @ 75-85°C for 12-15 minutes. For light destaining use from 3 mls/kg dry weight.

Dosage: 3 – 10ml/kg wash load depending on light to heavy stains. A temperature of 75-85°C is recommended for best results.

Dosage may vary according to degree of soiling. For further details as regards applications, please consult your JohnsonDiversey Representative.

CAUTION: NOT TO BE USED DIRECTLY ON BLOOD.

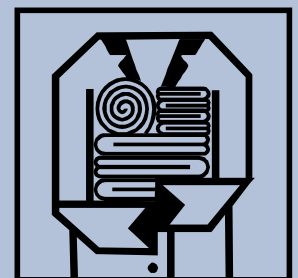

Clax Sonril 4EL1

Properties

Appearance Clear water-white liquid
Relative Density @ 20°C 1.14 typical

The data above is typical of normal production and should not be taken as specification.

Available pack sizes

25L Drum
200L Drum

Safety Precautions

Caution: Corrosive – Contains Hydrogen peroxide. Causes burns.

In case of contact with eyes wash immediately with copious amounts of water then obtain medical attention without delay. In case of contact with skin wash thoroughly with water. Remove contaminated clothing. Obtain medical attention. In case of inhalation remove from source of exposure and obtain medical attention without delay. In case of ingestion remove material from mouth. Drink 1 or 2 glasses of water or milk. Obtain medical attention without delay.

Full guidance on the handling and disposal of the product is given in a separate Material Safety Data Sheet.

For more information

Please consult your local JohnsonDiversey representative.

JohnsonDiversey South Africa (Pty) Ltd
Reg. No. 1993/006222/07

Head Office

Cnr Nagington & Rossouw Rds
Wadeville

P/Bag X037
Wadeville
1422

Tel.: (011) 871 9000
Fax: (011) 827 9795

Durban

West End House
No. 30 The Boulevard
West End Office Park
Westville

P O Box 529
New Germany
3620

(031) 265 2030
(031) 265 2035

Cape Town

2nd Floor
Old Warehouse Building
Black River Park
Fir Street
Observatory

P O Box 409
Eppindust
7475

(021) 448 1424
(021) 448 1987

Port Elizabeth

89A Pickering Str
Newton Park
Port Elizabeth

P O Box 222
Port Elizabeth
6000

(041) 365 7011
(041) 365 7045